

Thank you for purchasing NIDEC COMPONENTS CORPORATION. product. In order to use the product correctly and most appropriately, please read this manual before use and keep it for future reference. If you have any questions or concerns, please feel free to contact us.

For more detailed information please ask for the nearest distributor or the following sales center.

NIDEC COMPONENTS CORPORATION

Nishi-Shinjuku Prime Square bldg., 7-5-25 Nishi-Shinjuku, Shinjuku-ku, Tokyo 160-0023, Japan Phone: +81-3-3364-7055 Fax: +81-3-3364-7098 URL: https://www.nidec-components.com

Safety instructions Please read these safety instructions prior to using this product. The following safety concern is for avoiding any miss-use and to prevent any harms or causalities.

[CAUTION]

These products (pressure sensors, pressure switches, pressure gauges, pressure indicators, leakage sensors, etc.) are designed and manufactured as general industrial parts. Therefore, a person with sufficient knowledge and experience shall confirm the conditions and environments described in the catalog, specifications, and instruction manual of each product, check the suitability of the product for the machine, device, or system which you use, and ensure safety before use. These products are not intended to be used for applications particularly requiring high reliability (These include, but are not limited to, nuclear power control, aerospace and military purposes).

The details of warranty shall be as per the descriptions in this document and we shall not be liable for any damage on you resulting from the use of any equipment or device (including control systems) which is not in accordance with this document (hereinafter referred to as "use in violation"). In the case where you resell our products, we shall not be liable for any damage on a third party resulting from use in violation by the third party, and even if we make payment to the third party in connection with such use in violation regardless of the name by which such payment may be called, we may demand the whole amount thereof from you.

Caution : This caution mark describes when there is possibility that user may suffer from damage or physical damage may occur if the product is used improperly.


[∧] Caution

Piping

- K 2 type : Please install the clamp fittings properly.
- V C type : Install the product properly by using a wrench to the hexagonal portion of the sensor.
 - Do not apply any unnecessary force to the cable when installing. Please check the piping for any leakage after the sensor is installed.

Wiring Please wire accordingly to the chart below.Please be careful not to miss-wire.

Never make any short-circuits; it may result in an internal circuit damage. The shield wire is connected to the inside part of the fitting. If the sensor is earthed through the piping, do not earth the shield wire. If the sensor is not earthed through the piping, please earth the shield wire. If a wire extension is needed, please use a shielded wire.



Wire color

Red

Black


Green

White

Shield

Handling

- (1) Pressure port material is made of SUS316L
- (2) This product can be used for corrosive and non-corrosive gases / liquids compatible with SUS316L.
- (3)Other then specified pressure media, never insert any foreign matter into the pressure port (ex. Needle). It may result in malfunction.
- (4)Do not apply pressure exceeding the maximum pressure. (Twice the rated pressure)
- (5) Never connect the switch output (s) to load over 100mA. It may result in malfunction.
- (6) Use a regulated direct current power supply for stability. Surge absorbing devices (diodes, varistors, etc.) are necessary if inductive loads such as relays or solenoids are connected to power line and / or to the switch output(s). The FG terminal on the unit power supply should be earthed. (Refer to the diagrams on the right)
- (7) For flange fitting (K2 type), do not scratch the sealing surface.
- For gasket fitting (VC type), since the edge of the fitting is mirror polished, do not (8) scratch the edge of the fitting.
- (9)This product is not waterproofed. Do not use this product in environment with a chance of water splash.



Connection

Power (+)


Common

Switch output 1

Switch output 2



1. Part number designation

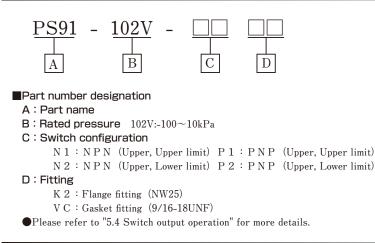


Setting method of switching pressure

(1) For adjusting switch output 1, apply pressure up to the point where switch operation is needed. Then slowly turn the trimmer (On the left side of VR) to the left until the LED 1 turns on.


⁽²⁾For adjusting switch output 2, apply pressure up to the point where switch operation is needed. Then slowly turn the trimmer (On the right side of VR) to the left until the LED 2 turns on.

•By turning the trimmer clock-wise, the setting value will increase towards vacuum.

3. Internal circuit

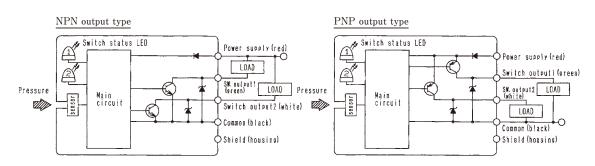

4. Outline dimensions

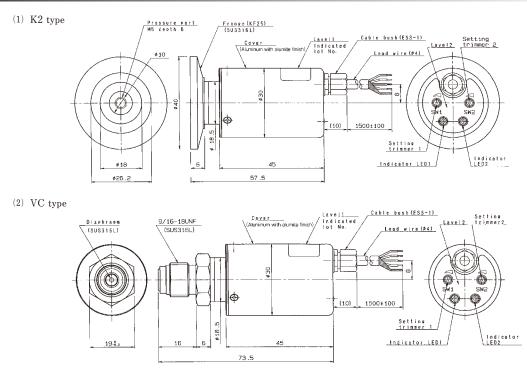



5. Specification

5.1 General specifications

Item	Specification
Maximum pressure	200kPa
Break-down pressure	300kPa
Operating temp. range	-20°C ∼80°C
Compensated temp. range	0°C∼50°C
Operating humidity	35~85%RH
Storage temp. range	-20°C ~80°C
Media	Gases / liquids compatible with SUS316L
Weight	Approx. 140g


5.2 Power

Item	Specification
Operating voltage	$12\sim 24$ VDC $\pm 10\%$
Current consumption	15mA max. (No load, switch ON)

5.3 Switch Output

Item	Specification
Number of outputs	2
Output interface	NPN or PNP open collector type
Setting method	Adjustable by trimmer
Switch setting range	-100kPa~10kPa
Switching mode	Upper, upper limit / Upper, lower limit
Output display	Red LED light (Switch 1 Switch 2)
Accuracy	±3% F.S
Hysteresis	2% F.S Max.
Switching capacity	30VDC 100mA Max.
Residual voltage	NPN: 0.8V Max. / PNP: 1.6V Max.



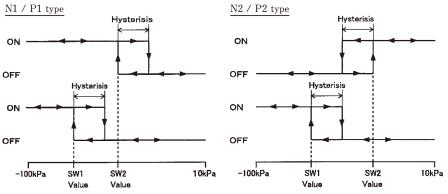

6. Warranty and Disclaimer

- The warranty period of these products is one year after delivery to a designated place. The warranty mentioned here is limited to the warranty of a delivered product itself, and it does not cover consumables such as batteries. Each product has its own specifications such as durability (pressure cycles). Therefore, check with each service office.
- 2) If a failure or damage of the product occurs during the warranty period, for which we are responsible, we will promptly replace or repair the product free of charge. The warranty mentioned here means the warranty of the product itself and does not cover any damage induced by a failure of the product.
- 3) The warranty does not cover when any of the following items is applicable:
- The failure is caused by conditions, environments, or handling not described in the catalogue and agreed specifications and other documents.
- The product has been modified, adjusted, or repaired by a person/company other than our company after delivery.
- \cdot The failure cannot be foreseen by the scientific and technological knowledge at the time of delivery.
- \cdot The failure is caused by force majeure such as disasters.